



**13 GENERATOR STATUS**  
 Green Flash - Generator starting  
 Green Steady - Generator running  
 Yellow Flash - Generator not available for auto start  
 Red Flash - Generator fault  
 Off - Generator Controller Disabled

**1 AC SOURCE**  
 On - External AC Supply present

**2 TRANSFER**  
 On - AC SOURCE in tolerance and connected to AC LOAD

**3 AC LOAD**  
 On - AC LOAD supply present

**4 OUTPUT MODE STATUS**  
 Off - Disconnected from Battery supply. AC bypass only  
 Yellow Slow Flash - Idle (off) - Monitoring and logging  
 No inverter output  
 Green Steady - Unit is ON  
 Green Slow Flash - Econo Mode active  
 Load sensing active  
 Green Fast Flash - Preparing to start  
 Red Steady - Fault detected  
 No inverter output  
 Red Flash - Open circuit or poor battery connection.

**12 GENERATOR BUTTON**  
 Press - (< 1 sec)  
 Generator On / Off

**11 CHARGING SOURCE**  
 AC - On  
 AC Source being used to charge battery.  
 RENEWABLE - On  
 Renewable supply charging battery.

**10 CHARGING MODE**  
 Renewable or AC Charge progress  
 INITIAL/BULK - Flashing - Initial  
 On - Bulk  
 ABSORPTION - On - Absorption  
 EQUALISE - Flashing - Pending Equalise  
 On - Equalise  
 FLOAT - On - Float  
 Flashing - Long Term Float

**9 BATTERY "FUEL" GAUGE**  
 Usable battery charge - SoC Control Enabled  
 Battery voltage indication - SoC Control Disabled  
 Top LED - Red Flash - Instant Hi DC volts shutdown  
 Open circuit or poor battery connection  
 Bottom LED - Yellow - Low battery  
 Bottom LED - Red - Low battery shutdown  
 Bottom LED - Red Flash - Instant Low DC volts shutdown  
 Open circuit or poor battery connection

**8 ALARM INDICATORS**  
 OVERTEMP - Yellow - Approaching Over temperature Shutdown  
 Red - Over temperature shutdown  
 SHUTDOWN - Yellow - Approaching shutdown  
 Red - Unit shutdown  
 ATTENTION - Off - Normal  
 Yellow - Fan service required  
 Yellow Flash - Clean filter or fan fault  
 - Capacitor service request  
 Red - Immediate attention required  
 Red Flash - Unit fault  
 See "Attention Required" in SP LINK Data View for more detailed information

**5 ON BUTTON**  
 Long press - Unit Idle / On  
 Short press - Econo Mode ON/OFF

**6 EXPORT**  
 On - Exporting to grid  
 Flashing - Self consumption

**7 SILENCE ALARM BUTTON**  
 Turns off any audible alarm